INSTRUCTIONS FOR USE

1. Always purchase the correct size and grade of battery most suitable for the intended use.
2. Replace all batteries of a set at the same time.
3. Clean the battery contacts and also those of the device prior to battery installation.
4. Ensure the batteries are installed correctly with regard to polarity (+ and -).
5. Remove batteries from equipment which is not to be used for an extended period of time.
6. Remove used batteries promptly.
7. Store unused battery in their original packaging, away from metal objects that could short-circuit them. Never short-circuit battery.
8. Never dispose of battery in fire, except under conditions of controlled incineration. Failure to observe this precaution may result in an explosion, never attempt to recharge primary battery as this may cause leakage, fire, or explosion.
9. Do not mix old and new batteries.
10. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel cadmium or Nickel Metal Hydride) batteries.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

OPERATING INSTRUCTIONS:

1. Remove the battery compartment cover by pushing in and down toward the bottom of the trimmer.
2. Align the AAA batteries with the positive and negative positions indicated inside the battery compartment. Being careful not to bend the clips, insert the negative end of each battery first so it will slip easily into position.
3. Return the battery cover to its original position by pushing it in and up until you hear a small click as it locks into place.
4. To use your trimmer, push ON/OFF switch up-wards to ON position.
5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.



*Requires 3 AAA batteries (not included). We recommend using alkaline batteries in your trimmer because they last longer.
Do not mix old and new batteries. Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel cadmium) batteries.

TAKING CARE OF YOUR TRIMMER

OILING THE BLADES

About once a month you should oil the trimmer blades with the oil provided in your kit. It is best to do this over a piece of newspaper. Turn the trimmer on and hold it so that the blades are pointed downward. Spread one drop of oil across the blades, then turn the trimmer off and wipe away the excess oil with a soft cloth. Be careful not to use too much oil and don't oil your trimmer more than necessary, as this could damage the motor. (Never attempt to oil the motor bearing, as it is permanently lubricated.) Keep oil away from children.

BLADE CARE

Because the trimmer blades are precision-made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take a cleaning brush and brush away any loose hair that has collected in the blades.
Be especially careful when changing or adjusting blades. When you have your trimmer serviced, be sure that both blades are sharpened or replaced at the same time.
To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer – to trim your beard and mustache.

DUAL BLADE TECHNOLOGY

The new dual blade technology features a detachable upper blade for regular trimming and a lower blade that provides a close, even cut with the first pass and can also be used as a detailing blade.

GROWING A BEARD AND MUSTACHE

There are three key factors that will determine which beard or mustache style is best for you:
1. The shape and dimensions of your face.
2. The natural growth of your beard/ mustache.
3. The thickness of your beard/mustache. If you are unsure about the type of beard or mustache that would most suit your face, speak with a professional hair stylist and ask for an opinion on what style would be best. Once your beard or mustache has been styled, it is essential that you maintain its appearance. To do this, use your trimmer to trim your beard/mustache weekly. For the best trimming results, your beard should be slightly damp (NOT WET) when using your trimmer. This will prevent the trimmer from removing more hair than desired.

TYPES OF BEARDS/MUSTACHES

GETTING STARTED:

The dual blade cutting system is designed to neatly, quickly and evenly trim your beard, goatee, mustache, neckline and even that close cut stubble look. While both blades are used for trimming, the upper blade can easily be removed leaving the bottom blade for detailing fine lines and edging.

COMB GUIDES

The table below explains the trim length for each comb. You should start out with a longer trim length comb and work your way down to the desired trim length.

S1	S1 Close stubble look
J1	J1 1mm trim
J2	J2 2mm trim
5-POSITION COMB	4mm, 6.5mm, 9mm, 11.5mm & 14mm trims

HOW TO USE THE SINGLE DETAIL TRIMMING BLADE

UPPER BLADE REMOVAL AND ATTACHMENT

The trimmer's upper blade can be removed to use the single detailing blade as shown in Fig. 1 and Fig. 2. the desired trim length.


Fig.1

Step 1 Push the upper blade forward.


Fig.2

Step 2 Lift the blade off.

NOTE: All attachments combs also fit on the single detailing blade for single blade trimming.

To re-attach upper blade see Fig. 3 and Fig.4.

Fig.3

Step 3 Line up white tab with opening in lower blade.

Fig.4

Step 4 Insert the white tab, slide forward until the 2 front tabs drop in and the blade snaps in place.

OUTLINING YOUR BEARD

1. It is always best to begin with a clean, slightly damp beard.
2. After you have combed through your beard in the direction it grows naturally, you will want to outline the desired shape, beginning under your jawline.
3. Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns, and toward your hairline.

NOW YOU'RE READY TO TRIM YOUR BEARD

1. The trimmer includes a five-position comb for use with the hair trimming blade (4-14mm). Each position increases the length by 2.5mm.
2. To use the 5-position comb, slide the unit over the trimmer blade and snap it down into position. At first, until you become familiar with the adjustments, use the longest trim setting. (You can always go back and make your beard a little shorter.)
3. Begin trimming your beard using smooth, even strokes. Start with your sideburns and work downward toward your chin. (Never attempt to trim against the natural growth of your beard because the hair will be cut too short.)
4. If you decide you want a closer trim, you can now adjust the 5-position comb attachment to a shorter setting (such as 4mm or 6.5mm) and go over your beard again until you achieve the desired length.

BLENDING THE JAWLINE

1. The two jawline attachments will help you to achieve a neat, finished trim under your chin. To use one of the attachments, press it down over the trimmer blades until it clicks into position (jawline J1 provides 1mm and jawline J2 provides 2mm).
2. Hold the trimmer in an upright position and begin trimming under your jawline, using short, even strokes.
3. After your beard is blended, turn off the trimmer and remove the attachment by gently pulling up on tab.



TO TRIM YOUR MUSTACHE

1. For best results, start with a clean, slightly damp mustache.
2. Comb through your mustache in the direction it grows.
3. Place the 5-position comb over the facial hair blade and snap it into position. It is a good idea to start with the longest trim setting adjustment. (You can always go back and cut your mustache more closely with a shorter setting.)

ALWAYS TRIM YOUR MUSTACHE FROM THE TOP DOWN

4. After your mustache has been trimmed to the desired length, remove the 5-position comb and, using the blades only, define the outline of the bottom of your mustache.
5. Use the single detailing blade for fine detail trimming and edging.

HOW TO GET THE STUBBLE LOOK

This trimmer includes 1 stubble comb. Comb #1 is close to the skin. The stubble comb fits on the blade just like the jawline combs, note blending the jawline section for specifics on how combs/jawline combs go on.

INSTRUCCIONES DE USO

1. No utilice pilas que no sean del tamaño o de la potencia indicada para uso con este aparato.
2. Cambie todas las pilas al mismo tiempo.
3. Limpie los contactos del aparato y los de las pila(s) antes de instalar pila(s) nueva(s).
4. Siempre respete los signos de polaridad (+/-) al instalar la(s) pila(s).
5. Retire la(s) pila(s) si no va a usar el aparato durante un largo período de tiempo.
6. Retire las pilas usadas sin demora.
7. Guarde las pilas nuevas en su paquete original, lejos de los objetos de metal los cuales podrían provocar un cortocircuito. Nunca cortocircuite las pilas.
8. Nunca tire las pilas al fuego, excepto mediante incineración controlada. Nunca intente cargar una pila no recargable. Esto podría presentar un riesgo de perdida de electrolito, incendio o explosión.
9. No junte pilas nuevas con pilas usadas.
10. No junte pilas alcalinas con pilas reguladas (carbón-zinc) o pilas recargables (NiCd o NiMH).

GUARDE ESTAS INSTRUCCIONES

PARA USO DOMÉSTICO SOLAMENTE

INSTRUCCIONES DE OPERACION

1. Deslice la cubierta del compartimiento de la(s) pila(s) hacia abajo para abrirlo.
2. Instale las pilas AAA, respetando los signos de polaridad. Introduzca el polo negativo primero, teniendo cuidado de no doblar las patas de contacto.
3. Cierre la cubierta del compartimiento de la(s) pila(s), empujando hasta que haga clic.
4. Para encender el aparato, deslice el interruptor hacia arriba (ON).
5. Para apagar el aparato, deslice el interruptor hacia abajo (OFF).

*Requiere 3 pilas AAA (no incluidas).



Botón de encendido/apagado

MANTENIMIENTO DE SU CORTADORA

LUBRICACIÓN

Lubrique las cuchillas aproximadamente una vez al mes, usando el aceite provisto. Para ensuciar, haga esto encima de un periódico. Sostenga el aparato de lado y aplique una gota de aceite sobre las cuchillas, luego apague el aparato y limpie el exceso de aceite con un paño suave.
No use demasiado aceite y no lubrique el aparato más de lo necesario. Esto podría dañar el motor. Tampoco no intente lubricar el motor. Llame a un centro de servicio autorizado para que lo limpien.

LIMPIEZA DE LAS CUCHILLAS

Las cuchillas de su aparato tienen diseñadas con precisión para un uso específico, y deben recibir un cuidado muy especial. Limpie las cuchillas después de cada uso con el cepillo de limpieza provisto.
Tenga cuidado cuando sea necesario cambiar o ajustar las cuchillas. Asegúrese de que ambas cuchillas siempre estén cambiadas o afiladas al mismo tiempo.
Para seguir disfrutando de su aparato durante mucho tiempo, utilícelo únicamente con el propósito para el cual fue diseñado: cortar la barba y el bigote.
Su nueva cortadora cuenta con un juego de cuchillas con dos cuchillas independientes.
La cuchilla superior es una cuchilla de corte regular. La cuchilla inferior es una cuchilla de acabado que permite cortar el pelo de más cerca, reduciendo la cantidad de pesadas.

BARBAS Y BIGOTES

El tipo de barba o de bigote que más conviene a una persona depende de:
1. La forma y el tamaño de su rostro.
2. La forma del crecimiento natural de su barba o de su bigote.
3. El espesor de su barba o de su bigote. Si no está seguro del tipo de barba o bigote que le conviene, pida consejo a un barbero. Después de dar forma a su barba o a su bigote, debrá mantener su aspecto, usando la cortadora una vez por semana. Para lograr resultados óptimos, humedezca ligeramente su barba antes de recortarla (no la moje). Esto evitará cortar demasiado pelo.

TIPOS DE BARBAS Y BIGOTES

CÓMO CORTAR SU BARBA

El sistema de cuchillas independientes permite cortar la barba y el bigote cuidadosa, rápida y uniformemente, así como conseguir efectos "barba de 3 días" variados y dar el acabado en todas las zonas que lo requieren inclusо la nuca y la barbilla. La cuchilla inferior es ideal para dar el acabado.

GUÍAS

La tabla a continuación indica la longitud a acortar la barba con un ajuste más corto hasta encontrar el ajuste perfecto.
Empiece con un ajuste largo y luego vuelva a cortar el pelo a la longitud deseada.

S1	S1 Barba de 3 días
J1	J1 1 mm
J2	J2 2 mm
GUÍA AJUSTABLE CON 5 POSICIONES	4 mm, 6.5 mm, 9 mm, 11.5 mm & 14 mm

Paso 3 Haga coincidir la lengüeta blanca con la abertura en la cuchilla inferior.


Fig. 3

Paso 4 Introduzca la lengüeta en la abertura y deslice la cuchilla hasta que haga clic y quede firme en su lugar.


Fig.4

CÓMO USAR LA CUCHILLA DE ACABADO

INSTALACIÓN/REMOCIÓN DE LA CUCHILLA SUPERIOR

Para usar la cuchilla de acabado, deberá retirar la cuchilla de corte (la cuchilla superior), según se describe a continuación en Fig.1 y Fig.2.


Fig.1

Paso 1 Empuje la cuchilla hacia adelante.

Fig.2

Paso 2 Alce y retire la cuchilla.

NOTA: Las guías son compatibles con ambas cuchillas.

Para volver a instalar la cuchilla superior, siga las instrucciones en Fig.3 y Fig.4.

EL CONTORNEO

1. Se le hará más fácil cortar la barba si está limpia y ligeramente humedecida.
2. Peine la barba en la dirección del crecimiento natural del pelo antes de empezar a dar le forma.
3. Dé forma a su barba empezando debajo de la guía y subiendo hacia la oreja. Siga lado del rostro. Siga dando forma al área de la mejilla, a las patillas y a la línea de nacimiento del cabello.

EL RECORTE

1. La cortadora cuenta con una guía ajustable con 5 posiciones, para uso con la cuchilla regular. La guía ajustable permite obtener longitudes de corte de 4 a 14 mm. Cada posición aumenta la longitud de corte de 2.5 mm.
2. Instale la guía acorde de la cuchilla de corte. Le recomendamos que utilice el ajuste más largo para empezar. Siempre podrá volver a acortar la barba.
3. Empiece a cortar su barba con movimientos parejos y suaves, desde las patillas hasta la quijada. Nunca corte en dirección contraria al crecimiento natural del pelo. El resultara demasiado corto.
4. Si desea un corto, escoja un largo de recorte más corto, como 4 mm ó 6.5 mm, y siga acortando su barba/bigote, presionando hasta que haga clic y quede firme en su lugar. La guía J1 corta el pelo a 1 mm y la guía J2 a 2 mm.
2. Sostenga la cortadora recta y corte el pelo usando pequeños movimientos uniformes.
3. Después de terminar, apague el aparato y retire el accesorio.



CÓMO CORTAR SU BIGOTE

1. Se le hará más fácil cortar su bigote si está limpio y ligeramente humedecido.
2. Peine su bigote en la dirección del crecimiento natural del pelo.
3. Instale la guía ajustable sobre la cuchilla normal. Empiece con la posición más larga (siempre podrá volver a acortar el bigote).

SIEMPRE CORTE SU BIGOTE DESDE ARRIBA HASTA ABAJO

4. Después de terminar, retire la guía y dé forma a la parte inferior de su bigote.
5. Utilice la cuchilla de acabado para disfrutar y dar forma.

Su cortadora incluye una guía para barba corta. La guía no. 1 corta el pelo cerca de la piel. La guía para barba corta cabe en la cuchilla de la misma manera que las guías para la quijada. Nota: vease la sección "Igualar la quijada".

BOTÓN DE ENCENDIDO/APAGADO

Para encender el aparato, deslice el botón de encendido/apagado hacia las cuchillas. Para apagarlo, deslícelo hacia atrás.

MANTENIMIENTO DE SU CORTADORA

CAMBIO DEL JUEGO DE CUCHILLAS

Limpie las cuchillas después de cada uso con un cepillo de limpieza. Retire la cuchilla superior y limpie el espacio entre las cuchillas cada 2–3 usos. Para retirar el juego de cuchillas, asegúrese de que el aparato esté apagado. Sostenga el aparato con el botón de encendido/apagado frente su cuerpo y empuje la cuchilla pequeña con el pulgar para desencajar el juego de cuchillas. Para instalar el juego de cuchillas, instálelo sobre el cabezal y presione la cuchilla grande para sujetarlo.

GMT177CS
CORTADORA PARA BARBA, BIGOTE & BARBA DE 3 DÍAS

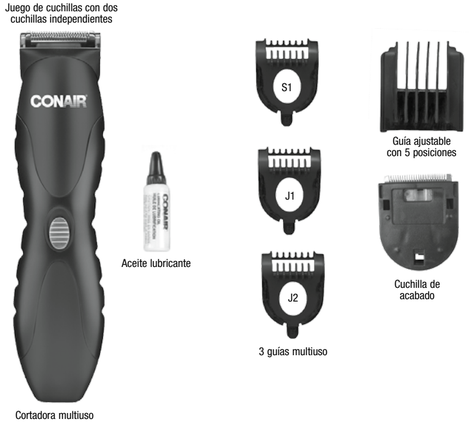

El sistema de cuchillas independientes permite cortar la barba y el bigote cuidadosa, rápida y uniformemente, así como conseguir efectos "barba de 3 días" variados y dar el acabado en todas las zonas que lo requieren incluso la nuca y la barbilla. La cuchilla inferior es ideal para dar el acabado.

GARANTÍA LIMITADA DE DOS AÑOS

Conair reparará o remplazará (a su opción) su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque o giro postal de US$3.00 por gastos de manejo y envío. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-366-0937 para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

Para registrar su producto, visítenos en: www.conair.com/registration

©2012 Conair Corporation

Centro de servicio

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

12PG132409

IB-11459

CORTAR AQUÍ

FORMULARIO DE PEDIDO – PARTES DE REPUESTO Y ACCESORIOS

Precios válidos hasta el 31 de diciembre de 2013. Aceptaremos los pedidos enviados después de esta fecha y le informaremos de cualquier cambio de precio.

DESCRIPCIÓN	NÚMERO	PRECIO	CANTIDAD	TOTAL
Cuchilla para cortar la barba	BLD-129	$6.50		
Cortapelo para nariz y orejas	BLD-130	$4.00		
Guía ajustable con 5 posiciones	AC329	$3.00		
1, 2, 3 guías para la quijada	AC330-332	$3.00		
3 guías para barba corta	AC333-335	$2.00		
3 tubos de aceite lubricante	HC-OIL	$2.00		
3 pinzas	CLP-1	$1.50		
Tijeras de peluquero	SC-1	$2.00		
Cepillo para la nuca	HCNB-1	$1.50		

Favor de incluir un cheque o giro postal al nombre de Conair. Sentimos no poder aceptar dinero en efectivo, estampillas, ni pedidos contra reembolso. Los residentes de CT, IL, AZ y PA deben sumar al subtotal el impuesto estatal a las ventas. Se requiere un pedido mínimo de $10.00; de lo contrario se sumará $2.00 al pedido por gastos administrativos.
Los precios incluyen gastos de manejo y envío. *Los precios están sujetos a cambio sin previo aviso.*
Precios válidos únicamente para envíos en la parte continental de los EE.UU. ***La entrega demora entre 4 y 6 semanas.***

Para evitar demoras, por favor escriba claramente.
Favor de incluir su dirección completa; UPS no puede hacer entregas a casillas postales.

Subtotal	
*Impuesto a la venta	
TOTAL	

NOMBRE _____
DIRECCIÓN _____
CIUDAD _____ ESTADO _____ CÓDIO POSTAL _____
TELEFONO ( ) _____ *(en caso de pregunta)*

Para información sobre otras partes de repuesto y accesorios, llame al: 1-800-3-CONAIR.

Enviar a:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730

Modelo GMT177CS
Instrucciones

Gracias por comprar la cortadora para barba/bigote de Conair. Le proporcionará años de servicio confiable.
Para su seguridad y para disfrutar plenamente de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.

ON/OFF SWITCH

To operate, simply slide switch toward blade, to stop push slide away from blade.

CARE OF YOUR TRIMMER

REPLACEMENT (REMOVAL) OF BLADE SET

Before storing you trimmer use a cleaning brush to whisk away any loose hair from the unit and the blades. You should remove the upper blade after a few uses to clean between the blades. To remove entire blade set from your trimmer, make sure the trimmer is in the OFF position. Remove the blade set by placing thumb against the smaller cutter and pushing forward, releasing the cutter assembly from the trimmer housing. Replace with new cutting system and reverse the removal procedure, only this time place your thumb on the large cutter and snap into place.

GMT177CS
BEARD, MUSTACHE & STUBBLE TRIMMER

The dual blade cutting system is designed to neatly, quickly and evenly trim your beard, goatee, mustache, neckline and even that close cut stubble look. While both blades are used for trimming, the upper blade can easily be removed leaving the bottom blade for detailing fine lines and edging.

LIMITED TWO YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and $3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Please register this product at www.conair.com/registration

© 2012 Conair Corporation

Service Center

Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

12PG132409

IB-11459

CUT HERE

TRIMMER REPLACEMENT PARTS & ACCESSORIES ORDER FORM

Pricing in effect through December 31, 2013. Orders postmarked after this date will be accepted, and the customer will be notified if pricing has changed.

ITEM	PART #	PRICE	QUANTITY	AMOUNT
Attachment Blade	BLD-129	$6.50		
Nose/Ear Blade	BLD-130	$4.00		
5-Position Comb	AC329	$3.00		
1, 2, 3 Jawline Combs	AC330-332	$3.00		
3 Stubble Combs	AC333-335	$2.00		
Lubricating Oil (pkg. of 3 tubes)	HC-OIL	$2.00		
Styling Clips (set of 3)	CLP-1	$1.50		
Barber Scissors	SC-1	$2.00		
Neck Brush	HCNB-1	$1.50		

Please allow 4-6 weeks for delivery.
To avoid delays, please print clearly.
We must have a street address, as UPS cannot deliver to a P.O. box.

NAME _____
ADDRESS _____ APT _____
CITY _____ STATE _____ ZIP _____
TELEPHONE ( ) _____ *(We call only if we have a question about your order.)*

For information on other Conair® haircut kit parts call: 1-800-3-CONAIR.

Mail to:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730

Subtotal
***Sales Tax**
TOTAL

Enclose check or money order made payable to Conair. We cannot accept cash. Sorry, no C.O.D. orders. CT, IL, AZ and PA residents should add applicable state sales tax. Minimum order of $10.00 or a $2.00 handling charge will be added to order. Prices are valid only in 50 states and Continental United States. Please use block letters and print clearly. Please allow without notice.

Model GMT177CS
Instruction Booklet

Conair wants to thank you for choosing our beard/mustache trimmer. We know it will provide you with years of reliable service.
For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using